

Contact Us:

Tel: 1-800-7BODINE (U.S. only)


Tel: 773-478-3515 Fax: 773-478-3232





CONNECTION DIAGRAM 07410007

MOTOR CONNECTION DIAGRAM 3 WIRE REVERSIBLE 3 PHASE

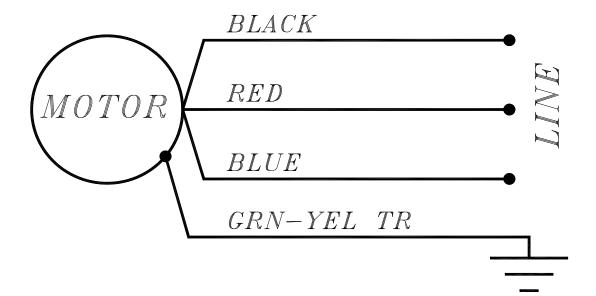

TO REVERSE DIRECTION OF ROTATION, TRANSPOSE ANY TWO LINE LEADS.

07410007 C

GROUND WIRE $(\frac{\perp}{-})$ OMITTED BY CUSTOMER REQUEST ONLY

BODINE LIMITED WARRANTY

The Bodine Electric Company warrants all products manufactured by it to be free of defects in workmanship and materials when used under Normal Operating Conditions and when applied in accordance with nameplate specifications. This warranty shall be in effect for a period of twelve months from date of purchase or eighteen months from date of manufacture, whichever comes first.

The Bodine Electric Company will repair or replace at its option, any of its products which has been found to be defective and is within the warranty period, provided that the product is shipped freight prepaid, with previous authorization, to Bodine's plant in Chicago, Illinois 60618 U.S.A., or to the nearest Bodine Authorized Service Center. At its option, all return shipments are F.O.B. Bodine's plant or Authorized Service Center. Bodine is not responsible for removal, installation, or any other incidental expenses incurred in shipping the product to or from Bodine.

This warranty is in lieu of any other expressed or implied warranty—including (but not limited to) any implied warranties of merchantability and/or fitness for a particular use or purpose.

Bodine's liability under this warranty shall be solely limited to repair or replacement of the Bodine product within the warranty period and Bodine shall not be liable, under any circumstances, for any consequential, incidental or indirect damages or expenses associated with the warranted products.

Commutators and/or brush wear and its associated effects are a normal occurrence and are not covered by this warranty unless otherwise agreed to by Bodine in writing.

Any Bodine product, which is damaged due to misuse, abuse, negligence or has been modified or dismantled without the knowledge or written consent of Bodine, is not covered by this warranty.

Motor/Gearmotor Serial No	Purchase Date	Installed By
See Other Side For Safet	ty, Installation, Use an	d Maintenance Information



GEARMOTOR / MOTOR SAFETY, INSTALLATION, USE, AND MAINTENANCE INFORMATION

Bodine Electric Company, 2500 W. Bradley Place, Chicago, IL 60618 U.S.A.© www.bodine-electric.com

6-2008 Printed in U.S.A.

Thank you for selecting a gearmotor/motor from Bodine Electric Company. With your new drive unit you will find yourself enjoying the same high performance and trouble free operation that has been characteristic of Bodine products

Bodine Electric Company prides itself on the quality of design and manufacture of its products. Great care is taken in an attempt to provide products free of defects in workmanship, or materials.

SAFETY

"The use of electric motors and generators, like that of all other utilization of concentrated power, is potentially hazardous. The degree of hazard can be greatly reduced by proper design, selection, installation, and use, but hazards cannot be completely eliminated. The reduction of hazards is the joint responsibility of the user, the manufacturer of the driven or driving equipment, and the manufacturer of the motor generator." *

Bodine products are designed and manufactured to comply to applicable safety standards and, in particular, to those issued by ANSI (American National Standards Institute), NEMA (National Electrical Manufacturers Association), U.L. (Underwriters Laboratories, Inc.), and Association). CSA (Canadian Standards

Most Bodine products are "third party approved" with respect to construction. Motors and gearmotors having component recognition by U.L. Inc. have a symbol on their nameplates. Those that are CSA certified also have a or a mark in the same location. If you need specific information regarding the "third party approval" of Bodine products, contact your Bodine Representative, or the Corporate Headquarters.

However, since even well built apparatus can be installed or operated in a hazardous manner, it is important that the users observe safety considerations. With respect to the load and environment, the user must properly select, install, and use the apparatus—for guidance on all three aspects see safety standards publication No. ANSI/NEMA MG-2.*

Standards Publication No. ANSI/NEMA MG-2. "Safety Standard for Construction and Guide for Selection, Installation and Use of Electric Motors and Generators."

Available from:

National Electrical Manufacturers Assoc.

www.nema.org

SELECTION

Before proceeding with the installation, the user should review the application to confirm that the proper drive has been selected. This should be done after reading this notice and all applicable safety standards. If in doubt, contact your Bodine Representative or the Corporate Headquarters if there is no Representative in Any selection or application made by Bodine or their your area. suaaestions Representatives are only to assist the customer—and in all cases, determination of fitness for purpose or use is solely the customer's responsibility.

All nameplate ratings are based on the following normal operating conditions:

- Duty-8 hours per day; 5 days per week if nameplated continuous duty (CONT), without frequent reversals or starts and
- Ambient temperature 0 to 40°C (104°F) except for Brushless products which are 0 to 25° C (77° F).
- Load-Uniform and free from shock or high inertia.

- Voltage—Within 10% of nameplate rating. Frequency—Within 5% of nameplat
- Combined variation of voltage and frequency—Within a total of 10% providing frequency variation does not exceed 5%.

Variations from the above conditions may be hazardous.

INSTALLATION

It is the responsibility of the equipment manufacturer or individual installing the apparatus to take diligent care in installing it. The National Electrical Code (NEC), sound local electrical and safety codes, and when applicable, the Occupational Safety and Health Act (OSHA) should be followed when installing the apparatus to reduce hazards to persons and property.

Inspection

Examine the apparatus for damage from shipment before connecting. Any claim(s) for shipping damage should be made to the freight carrier. Do not attempt to turn the output shaft of a gearmotor with an externally applied torque

Mounting

Any screws or similar devices, that penetrate the motor frame either for mounting the Bodine product or mounting something to the product, should be limited in length so as not to come in contact with, or in close proximity to, intended features that conduct electricity.

Bodine stock products are designed for universal mounting, however, parallel shaft gearmotors are not recommended for vertical mounting.

Connection

Follow nameplate for voltage, frequency, and phase of power supply. See accompanying wiring diagram as to connections for rotation (and capacitor, resistor, relay, protector, if required). When connecting, make sure that your motor/gearmotor is securely and adequately grounded—failure to ground properly may cause serious injury to personnel. Wiring diagrams are available at: www.bodine-electric.com

Wiring

For wire sizes and electrical connections refer to the National Electrical Code (NEC)—Article 430—"Motors, Motor Circuits, and Controllers" and/or applicable local area codes. Extension cords should not be used.

USE

Additional Safety Considerations The chance of electric shock,

fires. explosions can be reduced by giving proper consideration to the use of grounding, thermal and over current protection, type of enclosure, and good maintenance procedures.

The following information supplements the foregoing safety considerations: This information is not purported to be all-inclusive and the aforementioned references should be

- Bodine totally enclosed products are not explosion proof or dust ignition proof nor does Bodine offer stock products for hazardous locations (flammable/explosive gas, vapor, dust). When dealing with hazardous locations, an *approved* explosion proof or dust ignition proof product is the recommended approach. Exceptions are allowed by the National Electrical Code: The NEC and the NEMA safety standard should be studied thoroughly before exercising this option.
- Enclosed motors/gearmotors are suitable for dirty, damp locations. For outdoor use, wash downs, etc., enclosed motors must be protected by a IP-44 sealing kit or a cover while still allowing adequate airflow.

- Moisture will increase the electrical shock hazard of electrical insulation. Therefore, consideration should be given to the avoidance of (or protection from) liquids in the area of motors. Use of totally enclosed motors/gearmotors will reduce the hazard if all openings are sealed.
- Motors/gearmotors that employ capacitors can develop more than nameplate voltage across the capacitor and/or capacitor winding (depending on design). Suitable precautions should be taken when applying such motors.
- Do not rely upon self-locking gears or permanent magnet, or energized motors to hold a load in place if movement could result in personal injury. Mechanical locking devices should be used in such applications.
- For motors driven by electronic controls, do not use a function of the control for safety interlock purposes. An independent switch or relay should be used.

Before Starting

- Before attempting to start, check all connections and fuses.
- Proper consideration should be given to rotating members: Before starting, be sure keys, pulleys, etc. are securely fastened. Proper guards should be provided to prevent hazards to personnel while rotating.
- Other mechanical considerations include proper mounting and alignment products and safe loads on shafting and gearing.

Starting

- The motor/gearmotor should be teststarted in an unloaded state (because of possible reaction torque, the drive should be securely mounted when starting-even
- when unloaded).

 If the drive unit does not start promptly and run smoothly, disconnect immediately.
- If unable to correct the problem, contact your purchase source, or a Bodine Authorized Service Center, describing the trouble in detail. Include the serial number, type, and other nameplate data. Do not dismantle the product—tampering or disassembly <u>voids</u> the warranty.

MAINTENANCE

IMPORTANT—Before servicing or working on equipment, disconnect power source (this applies especially to equipment using automatic restart devices instead of manual restart devices and when examining or replacing brushes on brush-type motors/gearmotors).

Clean regularly to prevent dirt and dust from interfering with ventilation or clogging moving parts.

Brush-Type Motors/Gearmotors—For optimum performance, brush-type motors and gearmotors need periodic user-maintenance. The maintenance interval is best determined by performance, the user. Inspect brushes regularly for wear (replace in same axial position). Replace brushes when their length is less than ¼ inch (7

Products Employing Capacitors—Before servicing motors/gearmotors employing capacitors, always discharge the capacitor by placing a conductor across its terminals before touching the terminals with any part of your body.

LUBRICATION

All Bodine products are lubricated for life, and do not require re-lubrication.

See other side for Connection Diagram

(All information and data are subject to change without notice)